


CONCERT ZITHER MUNICH TUNING

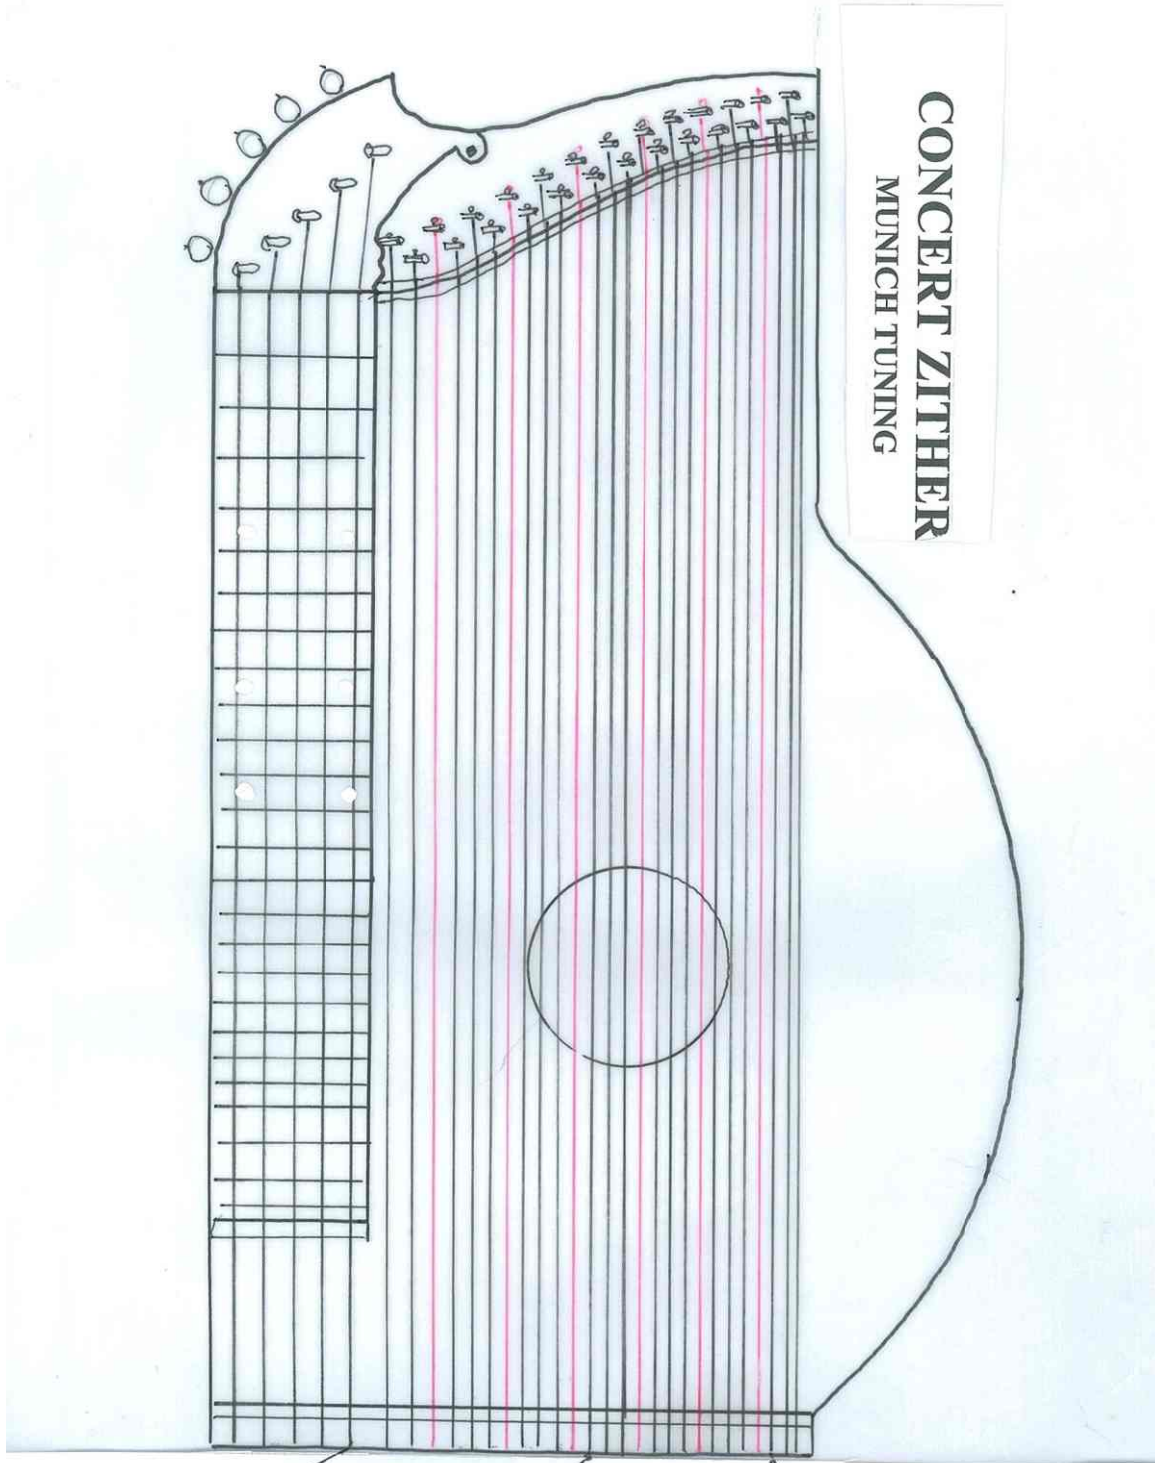

5 Fretboard strings 12 Accompaniment strings 12 Bass strings 5 - 11 Contra Bass strings

(chromatic tuning)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35					
A	A	D	G	C	E _b	B _b	F	C	G	D	A	E	B	F _#	C _#	G _#	E _b	B _b	F	C	G	D	A	E	B	F _#	C _#	G _#	F	E	E _b	D	C _#	C	B	B _b	A	G _#	G